


Spare parts list

# 14300 Saxophone stand

14300-000-55 - black

\*Rev 04

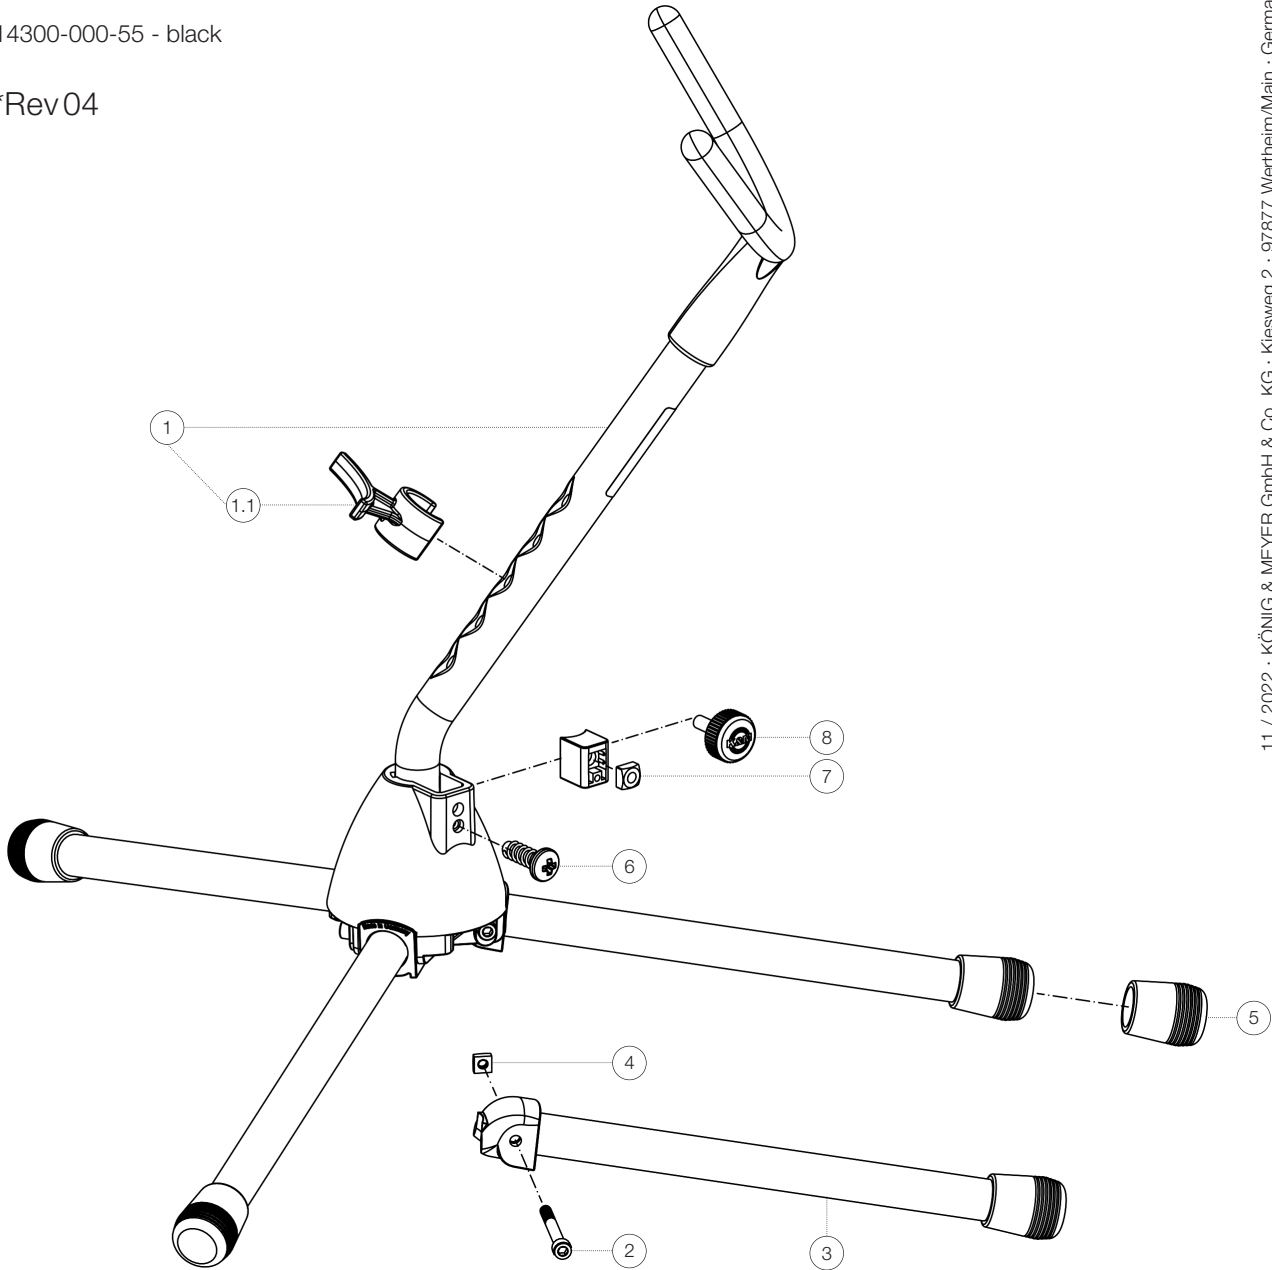

Position	Description	Article No.	Quantity
1	Middle part complete	6-14300-1-55	1
1.1	Saxophone rest	01-89-100-55	1
2	Hexagon socket head screw M5 x 45 mm	03-02-185-45	3
3	Foot tube complete	6-82723-1-55	3
4	Square nut M5	03-08-210-29	3
5	End cap	01-84-882-55	3
6	Oval-head screw M3.5 x 10 mm	03-06-134-29	1
7	Clamping piece with hole R10 complete	6-86645-1-55	1
8	Knurled screw with logo M6 x 22 mm	01-82-838-55	1