


Spare parts list

10062 Music stand »Robby Plus«

10062-015-55 - black

*Rev02

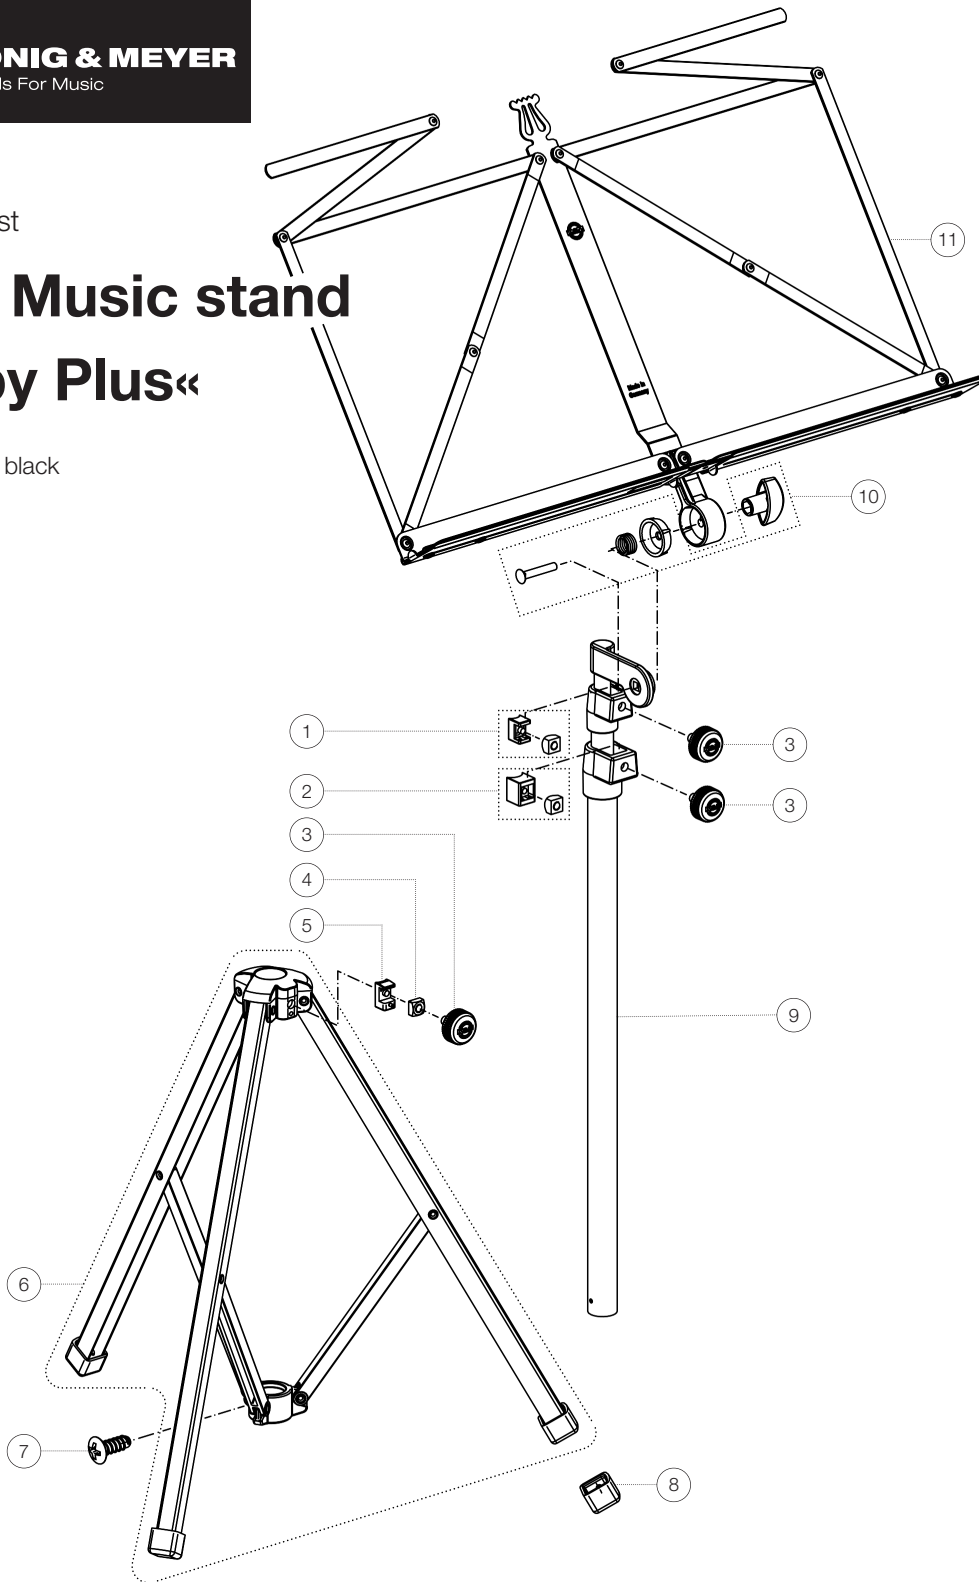

Position	Description	Article No.	Quantity
1	Clamping element R5,5 complete	6-86615-1-55	1
2	Clamping element R7,5 complete	6-86632-1-55	1
3	Knurled screw with logo M6 x 16 mm	01-82-834-55	3
4	Square nut M6	03-08-305-29	1
5	Clamping element with pin R8	01-86-634-55	1
6	Base complete	6-10065-2-55	1
7	Countersunk-head tapping screw	03-02-655-25	1
8	End cap	01-94-660-55	3
9	Rod combination complete	6-10065-3-55	1
10	Screw connection of the music desk	3-00-000-005	1
11	Music desk complete	6-10062-2-55	1